


EPR0M Installation and Instructions

Important Cautions, Read This First:

- REMOVE THE POWER FROM THE CHANGER
- EPROMS CAN BE DAMAGED BY STATIC DISCHARGE. BE SURE TO EITHER TOUCH A METAL SURFACE OR USE A GROUNDING STRAP ON YOUR BODY BEFORE INSTALLING THE NEW EPROM


Installation

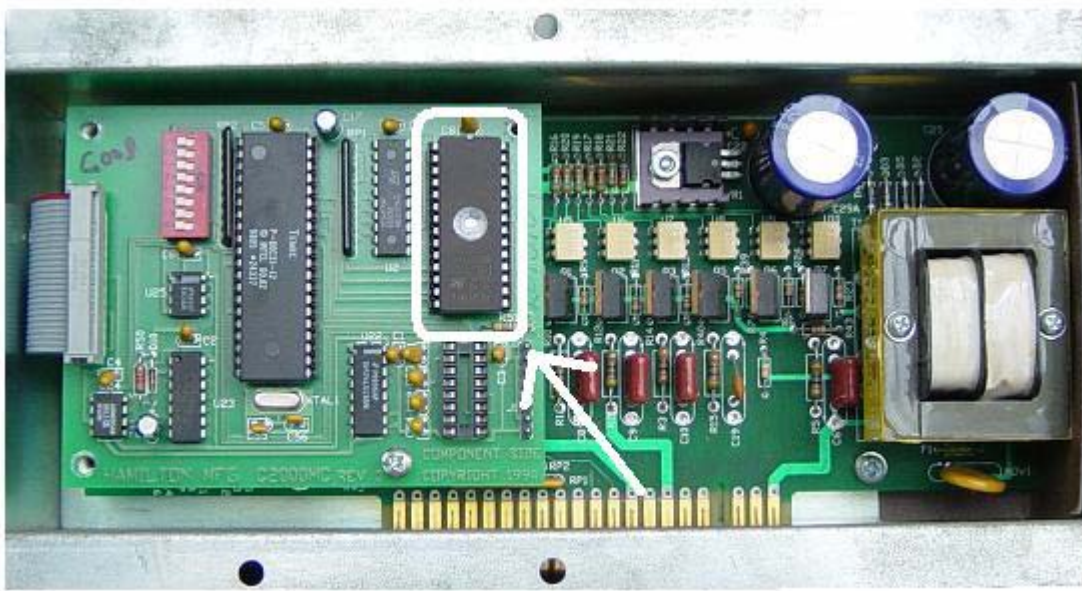


Begin by removing the fastener that holds the controller in place. Remove the controller and find the 28 pin EPROM located on the circuit board.



Next, carefully remove the EPROM. It is best to use an extractor.

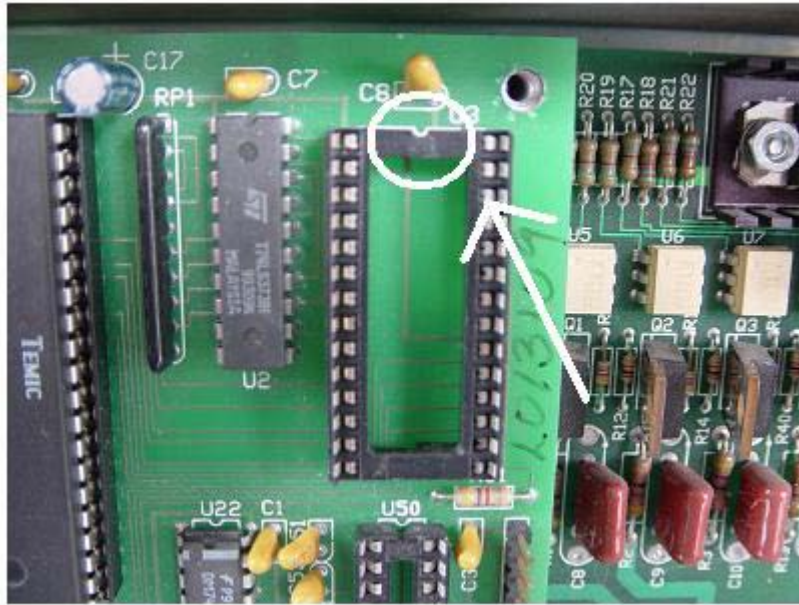

Notice the position of the notch on the control board. In this picture, it is at the top.

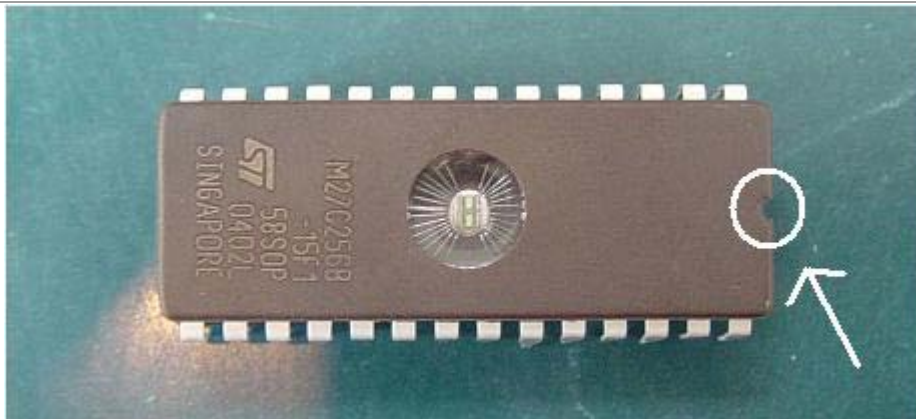

Notice the position of the notch on the EPROM itself. In this picture, it is at the right.



Finally, install the new EPROM into the controller, making sure that the notch on the EPROM is matched up with the notch on the board.

C2000 CONTROLLERS

After inserting the new chip set the dip switch (On the face) G to ON. The rest should be set off. This setting will pay out 4 quarters (or tokens) per dollar. It is suggested that you insert the new chip and verify proper operation with your new bill acceptor (with both \$1 and \$5 bills) before completing your installation. NOTE: If desired (and you have the proper payout wheel in your hopper) set the dip switches E-H-I-K-L to ON. These settings will payout 1 coin per dollar.

IMPORTANT NOTE

Place the chip that you remove in a safe place. You will want to remove your new chip and re-insert the original chip should you ever need to send your controller in for service.

Rev 3 04/04