



FIGURE 10 – RH Tell-tale Cluster

RIGHT-HAND TELL-TALE CLUSTER (Figure 10)

- | | | | |
|---|--|-------------------------|---|
|  | High Beam (Blue) - Hi-beam tell-tale will illuminate when the main head-lamps are on HIGH intensity. | SUPPLY AIR LOW | Supply Air Low (Red) - Tell-tale lights and a buzzer sounds when supply pressure drops below 65 psi and until it builds back up to 95 psi. |
| ENT DOOR | Entrance Door Open (Yellow) | FIRE ALARM | Fire Alarm (Red) - Tell-tale indicates a fire in the engine compartment. |
| HIGH RIDE | High Ride (Red) - Tell-tale flashes and a buzzer sounds when the coach is in transition to and is maintained in HIGH RIDE OR REAR RISE. | KNEEL | Kneel (Red) - Tell-tale flashes and a buzzer sounds when the coach is kneeling or recovering. When kneel is reached, the lamp stays on and the buzzer stops. |
| CRUISE ENABLED | Cruise Enabled (Green) - Tell-tale indicates that the cruise control is activated. | STOP REQUEST | Stop Request (Yellow) - Tell-tale lights when a passenger presses the stop request button. |
| STOP LAMPS | Stop Lamps (Yellow) - Tell-tale illuminates throughout the service brake application. | WCL STOP REQUEST | WCL Stop Request (Blue) (Optional) - Tell-tale lights when a passenger in the wheelchair area presses the stop request button. |
| ENGINE DOOR | Engine Door (Red) - Tell-tale indicates that the service door is open. | W/C INTERLOCK | Wheelchair Interlock (Red) (Optional) - Tell-tale indicates that the wheelchair lift is activated. |
| BAGGAGE LIGHTS | Baggage Lights (Yellow) - Tell-tale indicates that the baggage compartment lights have been left ON. | LAV EMERGENCY | Lavatory Emergency (Yellow) (Optional) - Tell-tale lights and a buzzer sounds when the emergency button in the lavatory is pressed. |
|  | Right Turn Indicator (Green) | LOW RIDE | Low Ride (Yellow) E4500 - Tell-tale flashes when the coach is in transition to and is maintained in LOW RIDE. |

