



T04819

T 2140-T 2145  
Detroit Diesel



### INSTRUMENT PANEL (CURRENT COACHES)

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1. Air outlet</li> <li>2. Cruise control "Set/coast-Resume/accel" switch</li> <li>3. Cruise control "On/off" switch</li> <li>4. Transmission push-button selector</li> <li>5. Engine coolant temperature gauge</li> <li>6. Tachometer</li> <li>7. Turbo boost gauge</li> <li>8. Indicator light panel</li> <li>9. Tag axle brakes air-pressure gauge</li> <li>10. Speedometer</li> <li>11. Front axle brakes air-pressure gauge</li> <li>12. Air outlet</li> <li>13. Air outlet</li> <li>14. Side mirror control</li> <li>15. Hazard warning flasher switch</li> <li>16. Master switch</li> <li>17. Radio</li> <li>18. Video control panel</li> <li>19. DDEC ProDriver</li> <li>20. Dashboard illumination rheostat</li> <li>21. Switches</li> </ol> | <ol style="list-style-type: none"> <li>22. Indicator lights</li> <li>23. Switches</li> <li>24. Defroster/heater temperature control</li> <li>25. Combustion heater timer</li> <li>26. Climate control panel</li> <li>27. Parking brake push-pull valve</li> <li>28. Ignition switch</li> <li>29. Entrance door control</li> <li>30. Reserve</li> <li>31. Jake brake or hydraulic retarder hand control lever</li> <li>32. Reserve</li> <li>33. Drive axle service brakes air-pressure gauge</li> <li>34. Multifunction display</li> <li>35. Engine oil pressure gauge</li> <li>36. Fuel level gauge</li> <li>37. Steering column combination switch</li> <li>38. Parking brake emergency release push-pull valve</li> <li>39. Connector for microphone</li> <li>40. +12V socket</li> </ol> |
|---|--|



T 2140-T 2145  
Detroit Diesel