



INSTRUMENT PANEL SWITCHES (CURRENT COACHES)

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Master switch 2. Marker lights/head lights (switching from low beam to high beam is with the combination switch on the steering column) 3. Stepwell lights (in roof) 4. Aisle lights (first position: night lights; second position: fluorescent lights) 5. Map lights 6. Passengers' lights (first position: night lights; second position: reading lights) 7. Instrument lights dimmer 8. Luggage compartment lights 9. Clearance and identification lights 10. Hazard warning flasher 11. Climate control "on/off" 12. Passengers' compartment fresh air intake (at R.H-side of switch 11) 13. Combustion heater "on/off" switch 14. Defroster fans 15. Defroster fresh air intake (at R.H-side of switch 14) | <ol style="list-style-type: none"> 16. Upper windshield wipers 17. Upper windshield heating (turns off automatically after 15 minutes) 18. Windshield blind 19. Side mirror heating 20. Coach front lower system 21. Coach raise/lower system 22. Tag axle unloading (momentary switch) 23. Jake brake or hydraulic retarder: foot control disconnect switch (OFF = foot control disconnected) 24. Lavatory 25. Engine diagnostic request/stop engine override (with locking device) 26. Deep snow and mud switch 27. Entrance door control 28. Cruise control/fast idle 29. ABS diagnose (located in diagnostic box at left side of driver's seat) |
|---|--|