


Position of corner post

Reprint © 2006 Buckhorn Trading Company

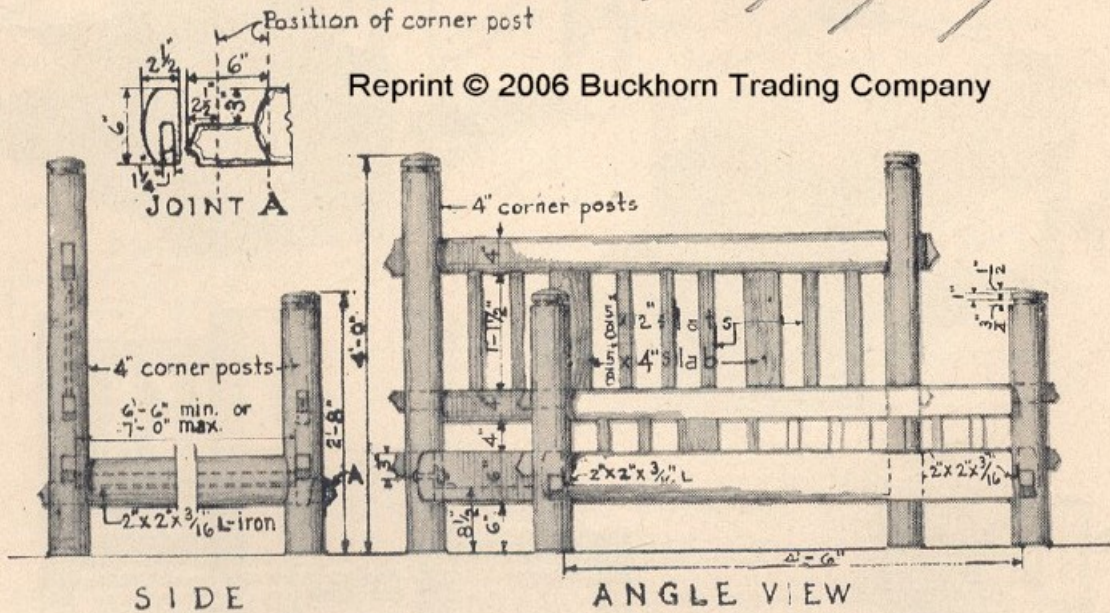

SIDE

ANGLE VIEW

FIGURE 40.—Plan for making a double bed for log-residence.

should impale the corner posts tightly; the joints should be glued and toe-nailed from below. Do not cut the side or end pieces until the bedspring has been measured and then allow for a slight play in both directions in setting the angle irons, in order to facilitate the insertion and removal of the mattress. Use $\frac{1}{4}$ - by 3-inch carriage bolts to fasten the angle irons to the wood frame. Figure 40 is a plan for making a double bed; for a single bed, reduce the width accordingly.

A double-deck bunk is made in much the same way as a bed (fig. 41).